Electrolux

Household Type

Maxi Steam Gun
Owner's Guide
350 Series

IMPORTANT

For any advice on your cleaner, pleaser refer to your local telephone directory for your nearest Electrolux Service Agent. If you reside in the UK please contact the

Customer Care line

08706 055055

INDEX

Important Safeguards 2
Service Information 3
Use & Assembly 4-8
Maintaining 8
Problem Solving 9
Guarantee 10

IMPORTANT SAFEGUARDS

Carefully read these instruction:

- The appliance is provided with a temperature regulator, a thermofuse and a safety plug. It complies with European standards regarding electrical household appliances.
- Check that the voltage indicated on the plate corresponds with that of the local network before connecting the appliance to the supply mains.
- Always plug the appliance into a grounded outlet.
- When using the flexible pipe (21), before releasing the steam, direct the jet of the gun (13) into a container so as to remove the condensation from the pipe.
- Never leave the appliance unattended when it is connected to the electric network.
- Do not tilt the appliance more than 45° from its upright position while it is being used in order to prevent hot water from leaking out of the boiler tank together with steam.
- Avoid directing the jet of steam towards people, animals or equipment with electrical components (e.g. ovens).
- Do not immerse the appliance in water or other liquids.
- Always unplug the appliance when you fill the boiler tank with water.
- Never leave the appliance within child's reach.
- Never add descaling agents, aromatics, alcoholics or detergents to the water in the appliance - they may damage it or make it unsafe to use.
- Do not touch hot surfaces while the appliance is being used. Allow the attachments to cool down before replacing them.
- **Attention:** before unscrewing the cap (3), carry out the following operations:
  - unplug the power cord from the outlet
  - slowly unscrew the cap (3) and wait for a few seconds before unscrewing it completely in order to allow the hissing noise of the steam to stop.
- **Attention:** before removing the flexible pipe (21) carry on the following operations:
  - slowly turn the pipe and remove it from the appliance
- Do not use the appliance if it is damaged. Any repair work, including the replacement of the power cord, must be carried out by an Electrolux Service Agent in order to prevent any risk.
- This appliance is intended for domestic use only.
- This appliance is in conformity with directive 89/336 EEC relevant to electromagnetic compatibility.
- When cleaning carpets or upholstery fabric, always test a small hidden area before. Do not use on velvet or velour upholstery.
- When the steam cools down, water may form in the steam hose. When you first use the machine or when it has not been used for a long period of time, drain the hot water into a container by pressing the steam spray button and aiming the spray nozzle into the measuring cup until steam begins to disperse again.
- When using the carrying strap always keep the product in the horizontal position. Do not allow the product to hang in the vertical position.

KEEP THESE INSTRUCTIONS

GENERAL INFORMATION

The steamer is designed as a complete change from old methods of traditional cleaning. This appliance is designed as a multi-purpose cleaner with a variety of applications.

Service Information

The instructions in this booklet serve as a guide to routine maintenance. For additional service information telephone Electrolux Customer Care on **08706 055055 (for UK residents only) or contact your nearest Electrolux Service Agent**. You should know the model and type when you call.

Rating Plate

The model and type are indicated on the rating plate located on the bottom of the cleaner. For prompt and complete service information, always refer to these numbers when inquiring about service.

MODEL	TYPE	
VOLTZ	WATTS	HERTZ

Electrolux
Made in Italy

Model & Type_____

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

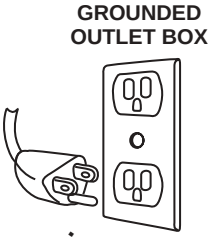

GROUNDING BLADE IS LONGEST OF THE THREE BLADES

FIGURE A

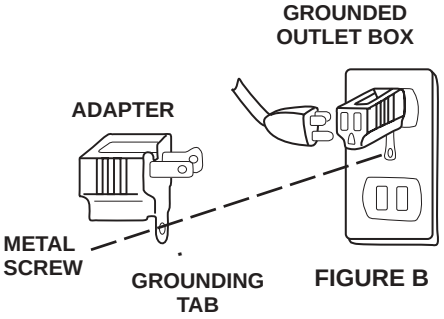

FIGURE B

Description of the hand held steamer

1. Appliance Body
2. Articulated Steam nozzle
3. Safety Cap
4. Steam Push Button
5. Handel
6. Power Cord
7. Warning Light

ACCESSORIES

8. Funnel
9. Measure
10. Round Brush
11. Bent Nozzle
12. Straight Nozzle
13. Gun
14. Safety Cursor
15. Steam Release Button
16. Gun Nozzle
17. Brush for Fabric
18. Glass Wiper
19. Cloth
20. Shoulder Belt
21. Flexible pipe

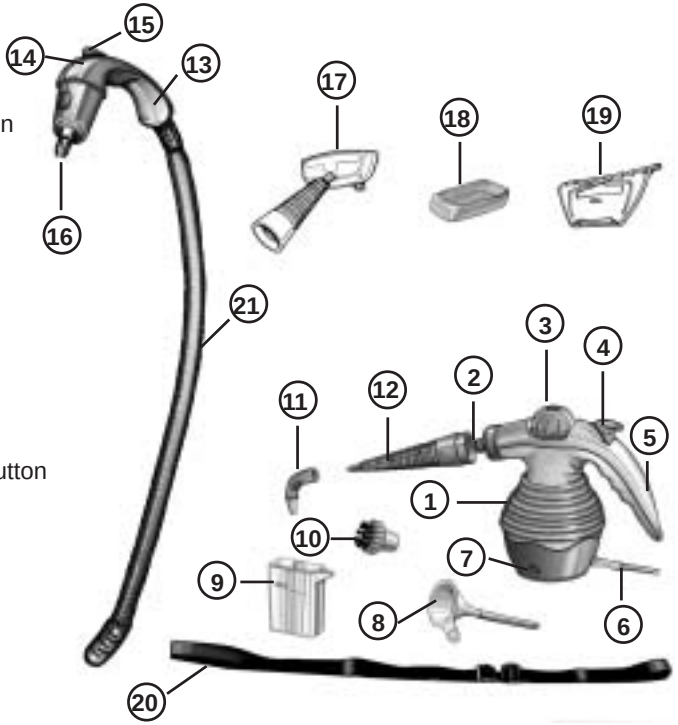

Dear Customer,

Thank you for choosing this Electrolux Envirosteam Gun which is an ideal cleaning product because of the degreasing and cleaning power of steam which eliminates bacteria, microbes, mites. It is an ecological method of cleaning which does not require the use of chemicals.

INSTRUCTIONS FOR USE

How to fill the boiler tank before use

Unscrew the safety cap (3) and overturn the boiler tank to drain it completely.
Fill the boiler tank (figure A) with a measure (9) full of water by means of the funnel (8).
Screw the safety cap (3) on again.

Fig. A

How to start the appliance

Insert the plug attached to the power cord into the outlet. The warning light (7) will go on. Steam will be ready after about 3 to 4 minutes. Press button (4) to release steam.
Never unscrew the boiler tank cap unless you are sure that the appliance has been unplugged from the outlet.

APPLICATION OF THE ATTACHMENTS

Straight nozzle:
a) fully insert the attachment by pushing it a against the appliance body. Align the mark on the nozzle with the yellow mark on the appliance as shown in figure B.
b) turn in a clockwise direction until the mark on the nozzle is perfectly aligned with the two lines on the appliance body. Now the attachment is locked in the central position.

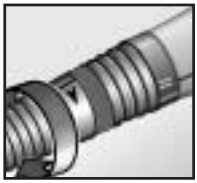
Fig. B

Round brush and bent nozzle:
Both these attachments can be attached to the straight nozzle (Figure C and D), or to the articulated steam nozzle on the appliance body (Figure E and F).

Fig. C

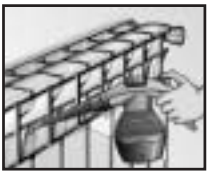
Fig. D

Fig. E

Fig. F

Flexible pipe, Brush for fabrics and glass wiper:
The flexible pipe (21) must be attached to the articulated steam nozzle (2). Then attach whichever accesory you wish to use - the round brush (10), the bent nozzle (11) the straight nozzle (12), then the brush for fabrics (17) .

The brush for fabrics comes with a cloth that can be used to clean delicate surfaces such as sofas and armchairs, and with a glass wiper fitted as shown in figure G, as well as for ironing hanging clothing articles (Fig. H).

Fig. G

Fig. H

CAUTION: do not use th glass wiper on cold glass. It may break the glass.

NOTE: never put descaling, aromating, alcoholic or detergent products into the appliance, as this may damge it or make it unsafe for use.

HOW TO ATTACH THE SHOULDER BELT TO THE STEAMER

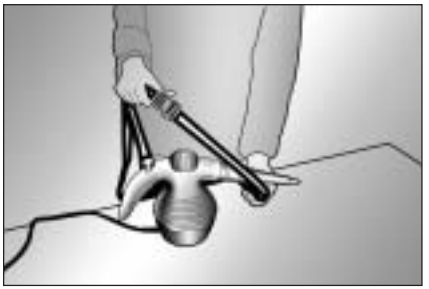

Position the steamer and the shoulder belt as shown above.

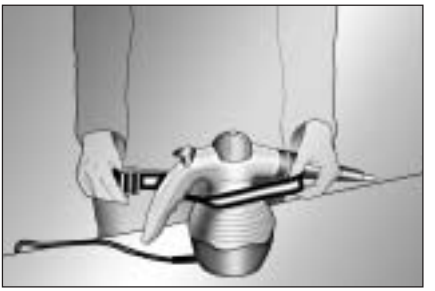

Place the shoulder belt under the handle and around the steamer body.

Tighten the shoulder belt around the body, properly adjusting the strap buckle nearest the steamer body.

Adjust the belt farthest away from the steamer body to a comfortable working position.

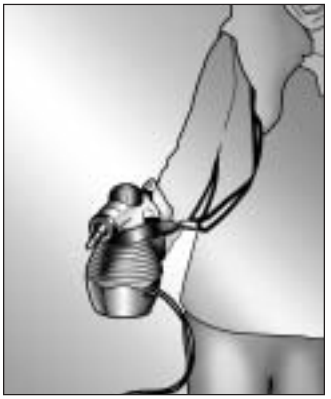

Example of how to carry the steamer.

Suggested Uses for Attachments

Scrub Brush

Stovetops, countertops, sealed grout, inside trash receptacles.

Fabric Tool

Steaming clothes, upholstery, window coverings.
It is suggested that the cloth is used with the fabric tool when used on clothing, upholstery and curtains.

Window Cleaner

Windows, mirrors, glass doors. **Do not use on cold windows or glass. It may break.**

Straight Nozzle

Edging, window sills, ledges, tile, mantles.

Angled Nozzle

Difficult to reach areas, toilet bowls, window sills.

How to fill the boiler while the appliance is being used

When the water in the boiler tank has run out and you press the button (4) no steam will come out. To refill, carry out the following operations:

a) unplug the appliance;

b) wait for about 10 seconds;

c) carefully unscrew the safety cap (3). Before unscrewing it completely wait for the hissing noise created by residual steam to stop;

d) unscrew the cap completely and slowly pour a measure of water into the boiler by means of the funnel (8). Take care not to let any water flow out of the tank during this operation;

e) retighten the safety cap;

f) insert the plug into the outlet.

CLEANING AND MAINTENANCE

Unplug the appliance from the outlet before carrying out any operation. Let the appliance cool down completely before putting it away or cleaning it.

To ensure the best performance and long life of the appliance, rinse out the boiler every month to remove any scale deposits. Do not use vinegar or other descaling agents.

PROBLEM SOLVING

NOTE: Unplug the electrical cord before servicing.

PROBLEM	CAUSE	SOLUTION
Appliance won't start	☑ Electric plug	☐ Push plug securely into outlet. Verify power on light is on. ☐ Try another outlet. ☐ Check circuit breaker.
	☑ No water in tank	☐ Check the tank for water.
Appliance won't make steam	☑ No water in tank	☐ Check the tank for water.
Appliance spits water out of nozzle	☑ Too much water in tank. Do not overfill.	☐ Check the water level in the tank.
	☑ Unit positioned upside down.	☐ Use in upright position.
	☑ Not fully preheated.	☐ Allow more time for water to heat up.
Water boils out of fill spout when adding water.	☑ Water tank too hot.	☐ Allow more time for cooling. ☐ Add water slowly. ☐ Use special funnel provided.
Accessories will not stay on.	☑ Not properly installed.	☐ Check for proper assembly. ☐ Review this guide for assembly instructions.
General questions	☑ Assembly or related accessories	☐ Please refer to your local telephone directory for your nearest Electrolux Service Agent. If you reside in the UK, you may contact the Customer Care line 08706 055055. Know the Model and Type numbers when you call.

Guarantee (for UK residents only)

This guarantee is in addition to your statutory and other legal rights.

This product is for household use only.

Electrolux products are carefully designed, manufactured, tested and inspected and, in consequence, we undertake to replace or repair any part found to be defective in material or workmanship, within one year of delivery to the original purchaser, free of charge. You may be required to take the product to your nearest service provider if the product requires attention during the first year.

There are certain conditions which may invalidate this guarantee:

a. It is dependent upon the appliance being correctly installed and used in accordance with the Company's instructions under normal domestic conditions within the United Kingdom or the Republic of Ireland.

b. Service at all times must be carried out by an Electrolux Service Representative or authorised agent.

c. The guarantee may be invalidated by unauthorised repair or modification of the appliance.

d. You may be charged by Electrolux if you call for an engineer to resolve a problem that we believe is covered in the instruction booklet.

The Company does not accept liability for defects arising from neglect, misuse or accident.

Proof of the date of purchase will be required before service under guarantee is provided. For further assistance call our customer care line on 08706 055055.

Important:

For future reference we suggest you record the following details here, and keep the receipt with the handbook as proof of purchase.

Purchased from _____

Date purchased _____ Model no _____

2002 Electrolux
Printed in Italy

Cod. 5065103400 rev. 0 del 28/03/02